



- Check that the engine flange has SAE 4 dimensions and that the flywheel size is included in the table below.
- Also check the exact position of the flywheel in relation to the flange ("G" measurement).
- When ordering a pump always specify the flywheel size.
- Use the diagram above to choose and check these coupling dimensions.

Flange Size	Flywheel Size	Flywheel Dimensions		
		A	B	G
SAE 4	6-1/2"	215.9 8-1/2"	200.025 7-7/8"	30.163 1-3/16"
	7-1/2"	241.3 9-1/2"	222.25 8-3/4"	30.163 1-3/16"
	8"	263.525 10-3/8"	244.475 9-5/8"	61.912 2-7/16"
	10"	314.325 12-3/8"	295.275 11-5/8"	53.975 2-1/8"

**1-800-Team ABI**



Email [abigausa@att.net](mailto:abigausa@att.net)

[www.abi-irrigation.com](http://www.abi-irrigation.com)



**AgriBusiness International, Inc**  
P.O. Box 909  
Villa Rica, Georgia 30180 USA  
Ph. 770-459-4401 Fx. 770-459-6877