



NOTE: See serial plate located on pump for ratio to indicate parts needed for POS 20 and 35.

Place "RI" prefix before all part numbers before placing orders.

POS	Item Description	TL4K125GA		TL4K125GA+T	
		Part #	Q	Part #	Q
1	Gearbox	8694	1	8694	1
2	Bolt / Stud	VP16	6	VP16	6
3	Nut	DEA12	6	DEA12	6
4	Washer	****	**	****	**
5	Plug / Breather w/dipstick	4371	1	4371	1
6	Cover	5296	1	5296	1
7	Gasket *	5310	1	5310	1
8	Bolt	VTE2	8	VTE2	8
9	Washer	RB8	8	RB8	8
10	Plug / Magnetic	4470	1	4470	1
11	Guard / PTO	4477	1	4477	1
12	Bolt	VTE11	3	VTE11	3
13	Washer	RP1	3	RP1	3
14	Shaft / Input	9826	1	9826	1
15	Cover	5298	1	5298	1
16	Gasket *	5301	1	5301	1
17	Bolt	VTSP1	3	VTSP1	3
18	Seal / Oil *	AT10	1	AT10	1
19	Bearing *	CU30	1	CU30	1
20	Gear / Transmission Z=75 R=3.41	5456	1	5456	1
20	Gear / Transmission Z=82 R=5.47	5371	1	5371	1
21	Spacer	5300	1	5300	1
22	Bearing *	CU15	1	CU15	1
23	Cover	5297	1	5297	1
24	O-Ring *	OR5	1	OR5	1
25	Bolt	VTE27	2	VTE27	2
26	Washer	RE12	2	RE12	2
27	Cover	8697	1	8697	1
28	Circlip / Internal	AFI19	1	AFI19	1

Place "RI" prefix before all part numbers before placing orders.

POS	Item Description	TL4K125GA		TL4K125GA+T	
		Part #	Q	Part #	Q
29	Rollpin	VCE17	1	VCE17	1
30	Rollpin	VCE18	1	VCE18	1
31	Plug	NO87	1	NO87	1
32	Cover / Impeller Shaft	8696	1	8696	1
33	O-Ring *	OR40	1	OR40	1
34	Bearing *	CU69	1	CU69	1
35	Shaft / Pinion Z=22 R=3,36	12693	1	12693	1
35	Shaft / Pinion Z=15 R=5,40	12694	1	12694	1
36	Spacer	****	**	****	**
37	Bearing *	CU48	1	CU48	1
38	Cover	****	**	****	**
39	O-Ring *	****	**	****	**
40	Circlip / Internal	AFI9	1	AFI9	1
41	Seal / Oil *	AT42	1	AT42	1
42	Ring / Water Sealing *	AP5	1	AP5	1
43	Support / Pump	5388	1	5388	1
44	Gasket *	5323	1	5323	1
45	Gasket *	5465	1	5465	1
46	Bolt / Stud	VTCEI39	4	VTCEI39	4
47	Nut	****	**	****	**
48	Washer	****	**	****	**
49	Cover	12578	1	12578	1
50	Gasket *	12581	2	12581	2
51	Seal / Oil *	AT8	1	AT8	1
52	Oiler	12550	1	12550	1
53	Guard / Oiler	****	**	****	**
54	Fitting	NO193	1	NO193	1
55	Kit / Mechanical Seal Flushing	13053	1	13053	1
56	Plug	NO140	1	NO140	1
57	Seal / Mechanical *	TM40V	1	TM40V	1
57	Seal / Mechanical *	TM40L	1	TM40L	1
58	Bolt / Stud	VTE41z	4	VTE41z	4
59	Nut	****	**	****	**
60	Washer	RE14	4	RE14	4
61	Body / Pump	12697	1	12697	1
62	Gasket *	3889	1	3889	1
63	Plug	NO19	2	NO19	2
64	Plate / Wear *	12216	1	12216	1
65	Gasket *	9616	2	9616	2
66	Impeller	12215	1	12215	1
67	Key	LI38	1	LI38	1
68	Nut / Impeller	DA27b	1	12902	1
69	Bolt	****	**	VTSP10	2
70	Pin	****	**	12903	2
71	Blade / Fixed Chopper *	****	**	12885	1
72	Bolt	VTCEI42	8	VTCEI42	8
73	Shell	12267	1	12267	1
74	Gasket *	12246	2	12246	2
75	Bolt	****	**	VTCEI23	2
76	Blade / Rotating Chopper *	****	**	12884	1
79	Bolt	VTCEI19	6	VTCEI19	6
80	Washer	RA2	6	RA2	6
81	Cone / Suction	12589	1	12589	1
82	Gasket *	12266	1	12266	1
83	Plug	NO14	1	NO14	1
84	Bolt / Stud	VP25	8	VP25	8
85	Nut	DEA16	8	DEA16	8
86	Washer	RE16	8	RE16	8
87	Flange	9222	1	9222	1
88	Gasket *	8094	1	8094	1
90	Bolt	VTE4	2	VTE4	2
91	Washer	RB10z	2	RB10z	2
92	Washer	RE10	2	RE10	2
93	Foot / Support	12583	1	12583	1
94	Rollpin	VCE7	1	VCE7	1
95	Washer	12696	1	12696	1
96	Bolt / Stud	VP21	10	VP21	10
97	Nut	DEA14	10	DEA14	10
98	Washer	RE14	10	RE14	10
100	Guard / Suction	9633	1	9633	1
102	Rollpin	Vce29	2	Vce29	2

It is useful to keep a stock of fast wearing parts on hand for quick repairs. Most recommended spare parts are marked by an asterisk (\*) following part description.

**1-800-Team ABI**

Email [abigausa@att.net](mailto:abigausa@att.net)  
[www.abi-irrigation.com](http://www.abi-irrigation.com)

tl4k125.pdf ABI 2002



**AgriBusiness International, Inc**  
P.O. Box 909  
Villa Rica, Georgia 30180 USA  
Ph. 770-459-4401 Fx. 770-459-6877